

## 12 finger Max Emerge XP/ME5

Seeds/acre 30" rows	Drive	Driven	Seed spacing (inches)
<b>32430</b>	<b>24</b>	<b>18</b>	<b>6.4</b>
<b>26534</b>	<b>24</b>	<b>22</b>	<b>7.9</b>
<b>22452</b>	<b>24</b>	<b>26</b>	<b>9.3</b>

To determine seed rate, proceed as follows: attach planter to tractor and raise, turn drive wheel until seed is coming out. Place a pan under and rotate tire 2 complete revolutions. Count seed, divide 140 by # of seeds. This number is your seed spacing in inches.

### 60 cell soybean Max Emerge XP/ME5

Seeds/acre 30" rows	Drive	Driven	Seed spacing (inches)
<b>162151</b>	<b>24</b>	<b>18</b>	<b>1.3</b>
<b>132669</b>	<b>24</b>	<b>22</b>	<b>1.6</b>
<b>112259</b>	<b>24</b>	<b>26</b>	<b>1.9</b>

To determine seed rate, proceed as follows: attach planter to tractor and raise, turn drive wheel until seed is coming out.

Place a pan under and rotate tire 2 complete revolutions.

Count seed, divide 140 by # of seeds. This number is your seed spacing in inches.